

Installation

- After unpacking the Atlas board, make sure all microservers are correctly seated in their respective slots and nothing has become loose during transport
- Connect included power supply to “Power” port
 - Plug power supply into suitable power outlet
- Connect the Micro USB cable to the “USB control” connector
 - Connect the other end of the cable to a USB jack of your PC
 - As the Atlas board is a HID device, the necessary drivers will automatically be installed by your OS
- Download the RECS_Master control software and extract it:
https://recswiki.christmann.info/download/RECS_Master/RECS_Master_latest.zip
- Start the RECS_Master control software:
 - Windows: Double-Click on RECS_Master.exe
 - Linux: Run the RECS_Master.jar file. Java 7 or higher is required.
 - Make sure your Firewall is not blocking access to RECS_Master, ports 8080 and 8443. On Windows, a Firewall dialog will pop up when you first start RECS_Master. Please click on “Allow access”.
- The RECS_Master control software will start and if available minimize to the system tray
- Access the RECS_Master control software by opening <http://localhost:8080> in your favourite web browser
 - Default username is “admin”, default password is “admin”
 - Please remember to change these defaults (Global settings → Users tab)!

Further information

For further information about the RECS® | Box system and instructions, please visit our RECS® | Box Wiki: <https://recswiki.christmann.info/>



RECS_Master download



RECS® | Box Wiki